

How to set corridor mode in IPC

[1] Product Model (Version)

All IPC from Dahua with baseline

[2] Description of the problem


When you install the camera in corridor, you may need vertical view. Therefore, you can refer to this document to fulfill corridor mode in IPC

[3] Problem Processing (Root Cause)

[4] Solution

4-1 Precondition


- IPC in resolution 4M or below can support corridor mode, if you have camera more than 4M, you can also downgrade the encode resolution to get corridor mode function.
- You can set the encode by "camera->video->encode"

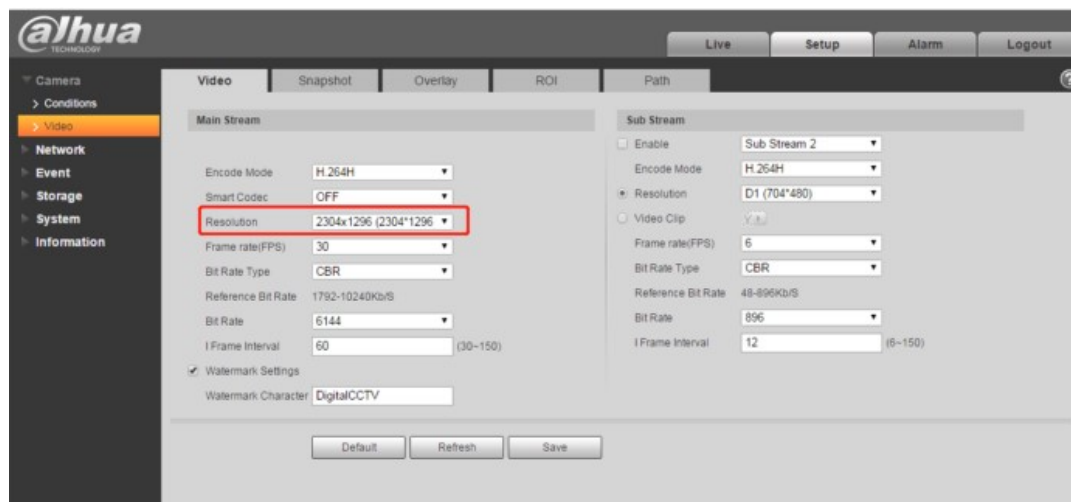

4-2 Step by Step Instructions

1. You can change the view angle to corridor mode by "setup->camera->conditions->picture"

Select the flip to 90°

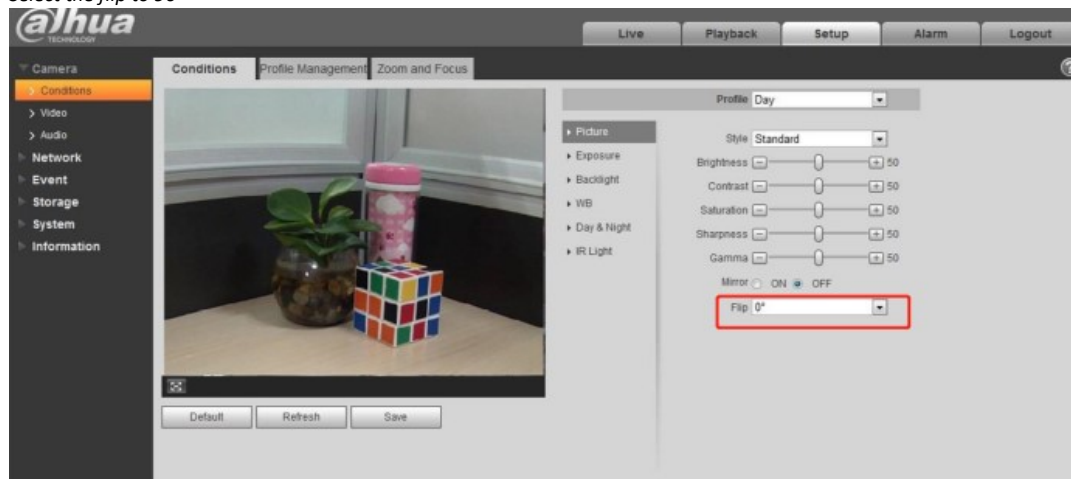

It is to change the display direction of the monitoring image. It includes following options:

Normal: The monitoring picture is normally displayed.

Flip mode 1: The monitoring picture is displayed with clockwise rotation 90°

Flip mode 2: The monitoring picture is displayed with anticlockwise rotation 90°

180°: The monitoring picture is displayed upside down.